

# **USER MANUAL**



BELTPACK
AIRLINK 2085

## **Characteristics**



- Full duplex audio wideband
- Adaptable to any headset of competition
- Removable battery pack
- Qualified for Europe, US, Brazi, Japan, Taïwan

#### **Radio**

Frequency range: 1870 - 1930 MHz (adjusted according to local regulation)

Transmit power: EU:23 dBm; US/JPN:21dBm

Receive sensitivity: -93 -92 -89 dBm Modulation: GFSK 1.152 Mbaud

Modulation depth: DECT GFSK bandwidth = 20 dB < 1,728 MHz

Range: Up to 300 meters

**Audio** 

Bandwidth : 150 Hz to 6500Hz at -3 dB Beltpack input : 250 mV Nominal RMS / 150  $\Omega$  Beltpack output : 2,5 V to 5.5V Nominal RMS / 600 $\Omega$ 

#### **Environment**

Using temperature : -20°C to +60°C Charging temperature : 0 to +45°C

IP protection level : IP64

On-concrete drop: about 2 meters

**Battery** 

Battery type: 2350mAh 3.7V Li-lon

Battery life: up to 20h

**Dimension and weight** 

Dimension: 128x61x38mm

Weight: 300g

Range

Depending upon environment (obstacles...) the range is up to 300 meters (line of sight).

#### **Guidelines**

- Adjustments and maintenance should be done according to manufacturer instructions.
- The Airlink 2085 beltpack can deteriorate with use, it is therefore advised to inspect them at regular intervals in order to detect any cracks or leaks, for example.
- This beltpack is equipped with an audio-electric input device. The user should verify that it works properly before using it. If the user notices a distortion or a defect, he/she should refer to the manufacturer's instructions.

### **Product description**


- The Airlink 2085 beltpack is designed to communicate with an aircraft wirelessly through an Airlink 2085 aircraft base. This user information is applicable to all versions.
- To ensure you get the best comfort, fit and function out of the product, it is important to read the instructions carefully and save them for future reference.
- Make sure to choose the correct product for your application.

#### **Storage**

• When the beltpack is not in use, keep it dry and clean, store them at normal room temperature and do not place them in direct sunlight.

#### **Maintenance**


Clean and disinfect the protective bumper and the beltpack itself with mild soap and
water only. This product may be adversely affected by certain chemical substances.
Further information should be sought from the manufacturer. Equipment lifetime
depends of environment, type of usage and correct use. Exposure to extreme
weather conditions can impact on headset lifetime, ie. prolonged exposure to the sun
or contaminants in the environment.

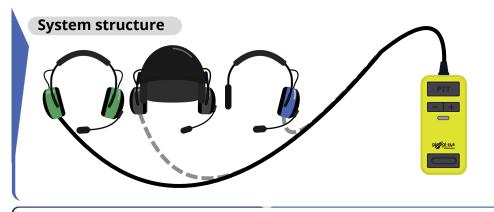

A beltpack base can connect any wired headset of the competition with Globalsys communication system.

# **Overview**

# Airlink 2085 beltpack

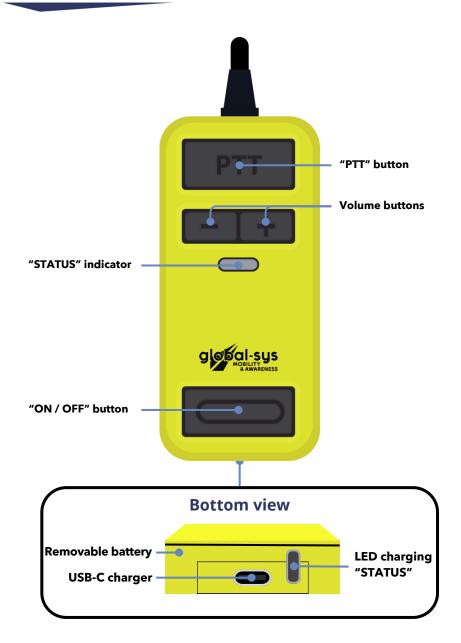

## **How it works**




Press bottom button during 3s to turn ON or OFF the station.



Press PTT button to activate microphone.



Press "+" and "-" button to adjust audio volume on the headset.

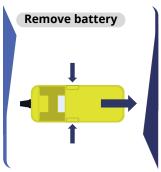

Press the two lockers on the sides an slide to remove the battery.



Battery can be charged through a USB-C cable or a rack charger.



Static: no communication Flashing: communication is established



Wait 10s after power on the devices to ensure units are not already paired (devices are already connected if LEDs flash on both unit)

If not, press ON/OFF button twice on each devices. LED will start flashing fast. If LED flashes slowly on both units: pairing is done and communication is established.

# Notes



For more info



www.Global-sys.com





#### **GLOBALSYS**

2b, avenue des coquelicots, 94380, Bonneuil-Sur-Marne

Phone : +331 43 99 42 17 Mail : sales@globalsys.fr

Website: www.global-sys.com