

USER MANUAL



WIRELESS HEADSET
AIRLINK 3085 IA
Ramp wireless interphone

AIRLINK 3085 WIRELESS HEADSET

Ramp wireless interphone



EN 352

Weight : 564g

NRR 26 dB

Advanced Ergonomics

Can be wirelessly connected to :

- Airlink 2085 base station
- Airlink 3085IA base station

Autonomy :

- Lithium battery 6h
- NIMH battery 12-16h

Certifications

EN352-1:2002 ; EN352-6 :2002

AS/NZS : Class 5

SLC80 : 30dB

CE1974

f(Hz)	63	125	125	500	1000	2000	4000	8000
Mf(dB)	19.2	18.4	23.1	32.4	37.3	34.1	41.5	38.2
Sf(dB)	4.3	2.6	2.3	2.8	2.9	2.6	3.0	2.8
APV(dB)	14.9	15.8	20.8	29.6	34.4	31.5	38.5	35.4

H = 34dB, M = 30dB, L=23dB, SNR = 32dB, NRR = 26 dB

Noise Reduction Rating (NRR)

Federal law prohibits removal of this label before purchase




LABEL REQUIRED BY U.S EPA REGULATION 40 CFR part 211, subpart B

26 dB

GLOBAL-SYS,
Bonneuil-sur-Marne, France

WH443(A/B)(0/1)50

Warnings

- The noise reduction will be adversely affected by anything that impairs the seal of the earmuff cushions against the head, ie. : hair above ears, thick spectacle frames, balaclavas,... we recommend to remove them to get the best protection.   
- The reported attenuation will be obtained only if the protector is in good condition and worn as directed.
- Some chemicals may have a negative effect on this product. It's recommended to ask the manufacturer for more information.
- The adaptation of hygienic protections on the ear cups can affect the acoustic performance of the headset.
- The output of the audio circuit of this noise protector may exceed the daily limit of the sound level.
- Remember that wearing hearing protectors can reduce noises such as screaming warning, alarms or other important signals. The user must pay attention to its surroundings.

Guidelines

- Adjustments and maintenance should be done according to manufacturer instructions.
- Headset must be worn permanently in a noisy environment.
- Headset can deteriorate with use, it is therefore advised to inspect them at regular intervals in order to detect any cracks or leaks, for example .
- This headset is equipped with an audio-electric input device. The user should verify that it works properly before using it. If the user notices a distortion or a defect, he/she should refer to the manufacturer's instructions.

Materials

- Headband : Acetal
- Lid : ABS
- Spring lid, Height adjustment socket, Bluetooth button : TPE
- Fixation and Microphone arm : polyamide
- Ear pads and foam : polyuréthane

Product description

- The Globalsys Airlink 3085 IA is designed to protect against harmful noise and to communicate with an aircraft wirelessly through an AirLink base station. This user information is applicable for all versions.
- To ensure you get the best comfort, fit and function out of the product, it is important to read the instructions carefully and save them for future reference.
- Please refer to the attenuation table for further details on noise reduction.
- Make sure to choose the correct product for your application.

Note :

This headset is only designed for on ground applications and not for use in the aircraft flightdeck.

Approvals

- The products meets the Essential Health and Safety Requirements as laid out in Annex II of the PPE regulation (EU) 2016/425. CE marking are in accordance with EN352-1:2002 and EN352- 6:2002. The products are approved and also monitored acc. to module C2 by PZT (NB1974), GmbH Bismarckstr. 264B, 26389 Wilhelmshaven, Germany.
- EU declaration of conformity can be accessed on Globalsys website :

<https://global-sys.com/assets/documents/certifications/eu.pdf>


Storage

- When the hearing protector is not in use, store it in such a way that the headband is not stretched and the cushions are not compressed. Keep the hearing protectors dry and clean, store them at normal room temperature and do not place them in direct sunlight.

Maintenance

- Clean and disinfect the cups, ear pads and inserts with mild soap and water only. This product may be adversely affected by certain chemical substances. Further information should be sought from the manufacturer. Hearing protectors and ear pads in particular may deteriorate with use and should be examined at frequent intervals for cracking and leakage, for example at the start of every working shift. Equipment lifetime depends of environment, type of usage and correct use. Exposure to extreme weather conditions can impact on headset lifetime, ie. prolonged exposure to the sun or contaminants in the environment.


Hygiene kit

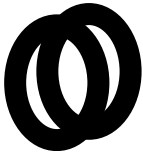

Left and Right ear pads
Ref. 13#371L & 13#371R




Microphone Foam
Ref. 03_002

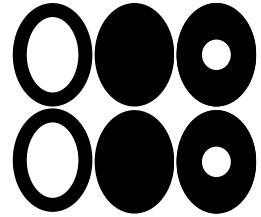


Foam kit (Ref. 33#371)
x2 internal foam
x2 external foam
x2 earpad foam

The cushions and inserts are replaceable. Always replace worn or damaged parts.

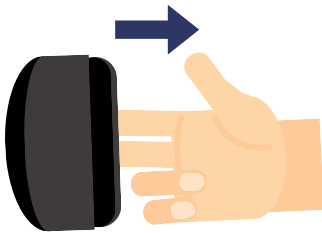

Remove the ear pads by pulling it straight out.

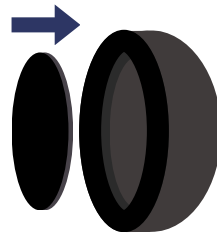

Replace the old internal foam and insert with new ones from the hygiene kit.


- Use only hygiene kits from the manufacturer, consisting of one pair of ear pads, one pair of foam and one microphone foam. A replacement of the hygiene kits is recommended for at least twice a year for standard use to ensure that the noise attenuation performances are maintained. The fitting of hygiene covers to internal foams may affect the acoustic performance of the hearing protectors. For order reference, please refer to spare parts list above.

General fitting instructions

Before following the fitting instructions below, brush excess hair aside and remove any ear jewellery that could affect acoustic seal. The cushions should form a snug fit against the head with no interference of the seal by any objects, e.g. respirator headbands or spectacles arms, and that the cups completely enclose the ears.

1- Make sure to put the headband the right way round.

The inside of the headband is marked with a letter L on the left hand side and a letter R on the right hand side. Ensure that the headband is positioned correctly.

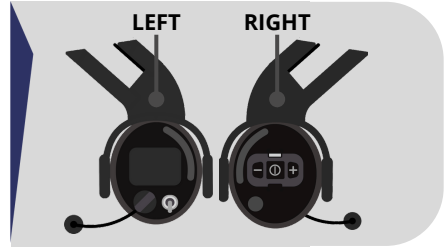


2- Adjusting the headset

With the headband over the head, adjust the height of the cups by sliding them up or down, so they completely enclose the ears.



3- Adjusting the microphone

Ensure microphone is well orientated. "TALK" inscription must be turned to mouth side.

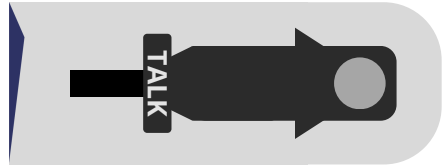


**Over the head
 earmuffs size**

S
135/122

M
145/130

L
150/135

System structure

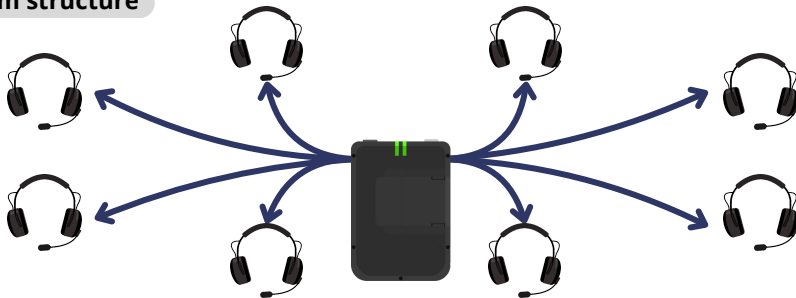

By connecting it to the aircraft, a mobile base can connect up to 8 wireless headsets or beltpacks with the pilot of the aircraft.

Headset functions

ON / OFF




Long press middle button to turn on or off.

Adjust microphone



Adjust the microphone to 1 cm from your mouth.

Using PTT

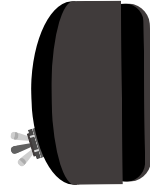


- Upper position : VOX
- Middle position : OFF
- Lower position : PTT

Remove batteries




Replace batteries by opening the black hood. Either x2AA batteries or BAT407 can be used.

Volume

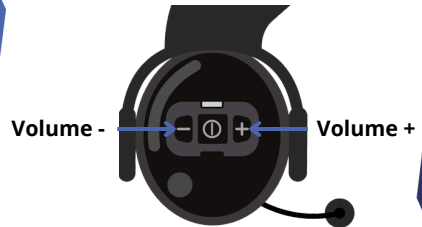

You can adjust the audio volume by pressing both "+" and "-" buttons on the headset.

Batteries health

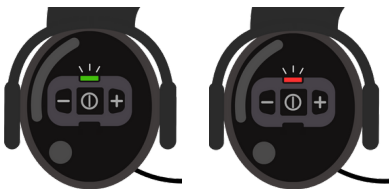

Battery > 10 %



Battery < 10 %

A voice prompt will indicate "Low battery" frequently if the battery is too low.


Wired charge



- Led flash red : headset is charging
 - Led is Green : headset is charged
 - Led off : no charging
- Charge the battery with an USB-C cable.

LED can be desactivable with a computer

Pairing (only first time)

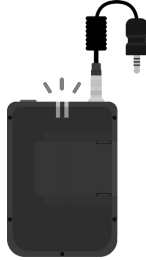

LED signal

Turn on both unit. If the LED flash, there is no communication established.



Pairing activation

Press ON/OFF button twice on each devices. LED will start flashing fast.



Pairing connection

If LED don't flash both for the base and the headset : communication is established.

Options



- To activate NC option, press lateral button until the voice prompt indicate "NC".
- To activate VOX option, press lateral button until the voice prompt indicate "VOX".
- To activate Long Range option, press lateral button until the voice indicate "Long Range"

You can turn on or off these options by using volume buttons.



GLOBALSYS

2 bis, avenue des coquelicots, 94380, Bonneuil-Sur-Marne

Phone : +331 43 99 42 17

Mail : sales@globalsys.fr

Website : www.global-sys.com